



CHAPTER 4. REMOVING OF MAJOR PARTS

[1] REMOVING OF MAJOR PARTS LC-26SD1E/RU

1. Remove the 4 lock screws ① . Detach the Stand.
2. Remove the 3 lock screws ② . 1 lock screw ③ and the 9 lock screws ④ . Detach the Rear Cabinet.
3. Remove the 2 lock screws ⑤ and detach the Bottom Cover.
4. Remove the 2 lock screws ⑥ and detach the Stand Angle.
5. Remove the 5 lock screws ⑦ and detach the Center Angle.
6. Disconnect the KM connector. Remove the 2 lock screws ⑧ and detach the Top Cover Ass'y.
7. Remove the 3 lock screws ⑨ and detach the KEY Unit.

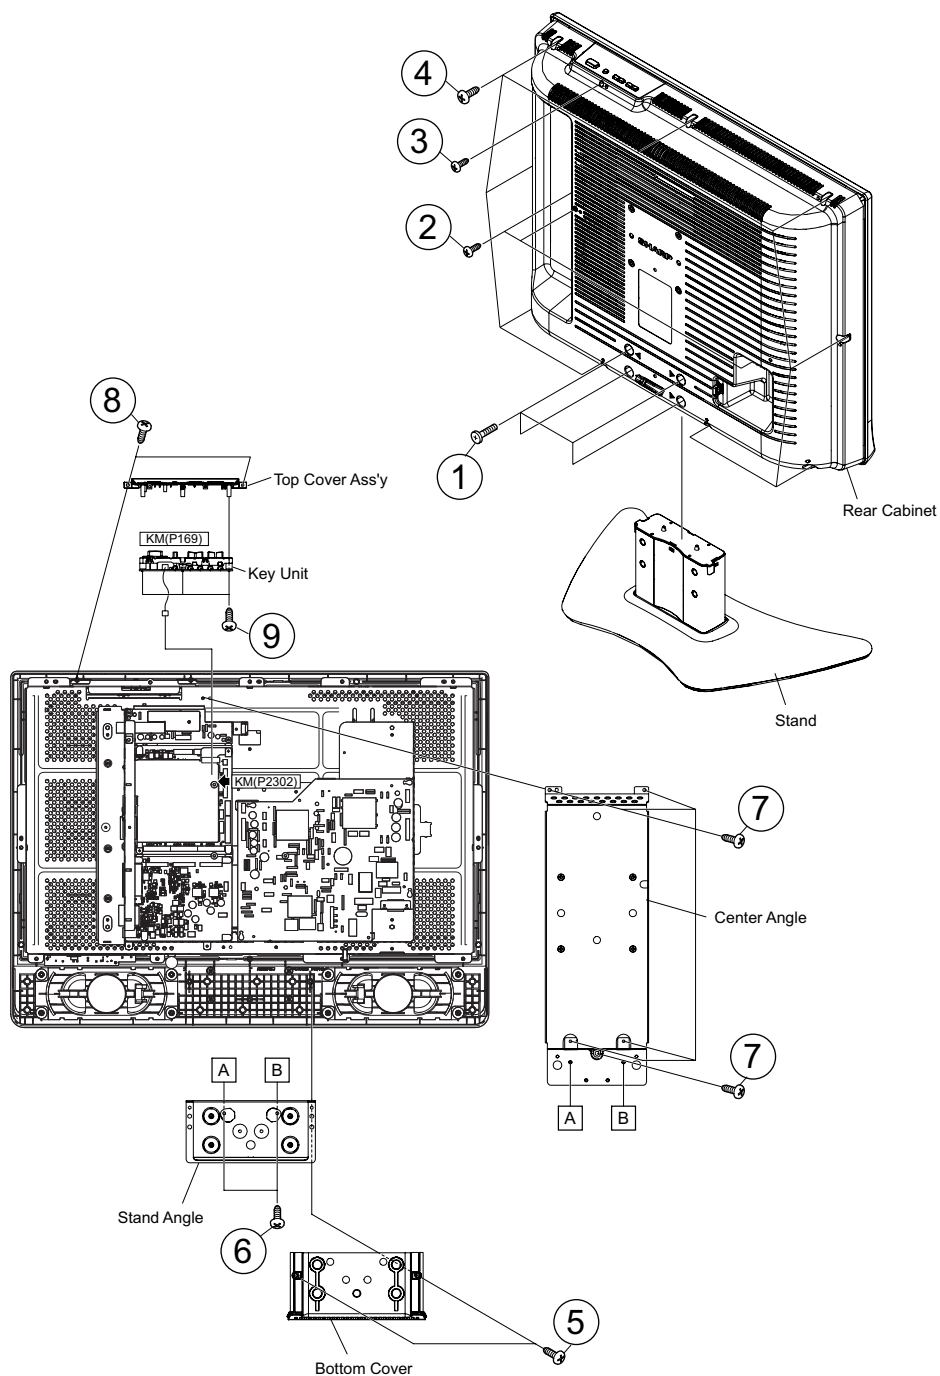


8. Remove all the connectors from PWBs.

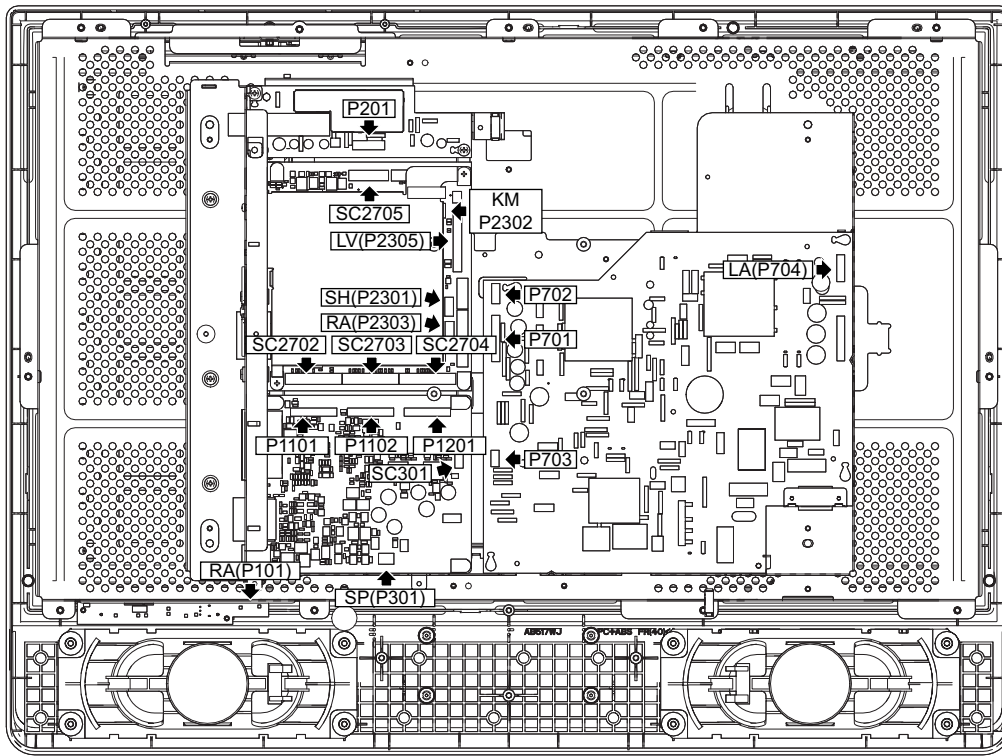


LC-26SD1E/RU, LC-32SD1E/RU

9. Remove the 4 lock screws ⑩ and detach the Power Unit.
10. Remove the 3 lock screws ⑪ and detach the D-Tuner Unit and Tuner Earth Plate.
11. Remove the 2 lock screws ⑫. And detach the Digital Unit and Main Unit.
12. Remove the 4 lock screws ⑬ and detach the AV Unit.
13. Remove the 5 lock screws ⑭ detach the Chassis Tray.
14. Remove the 2 lock screws ⑮ and detach the R/C, LED Unit.
15. Remove the 1 lock screw ⑯ and detach the Speaker R.
16. Remove the 1 lock screw ⑰ and detach the Speaker L.

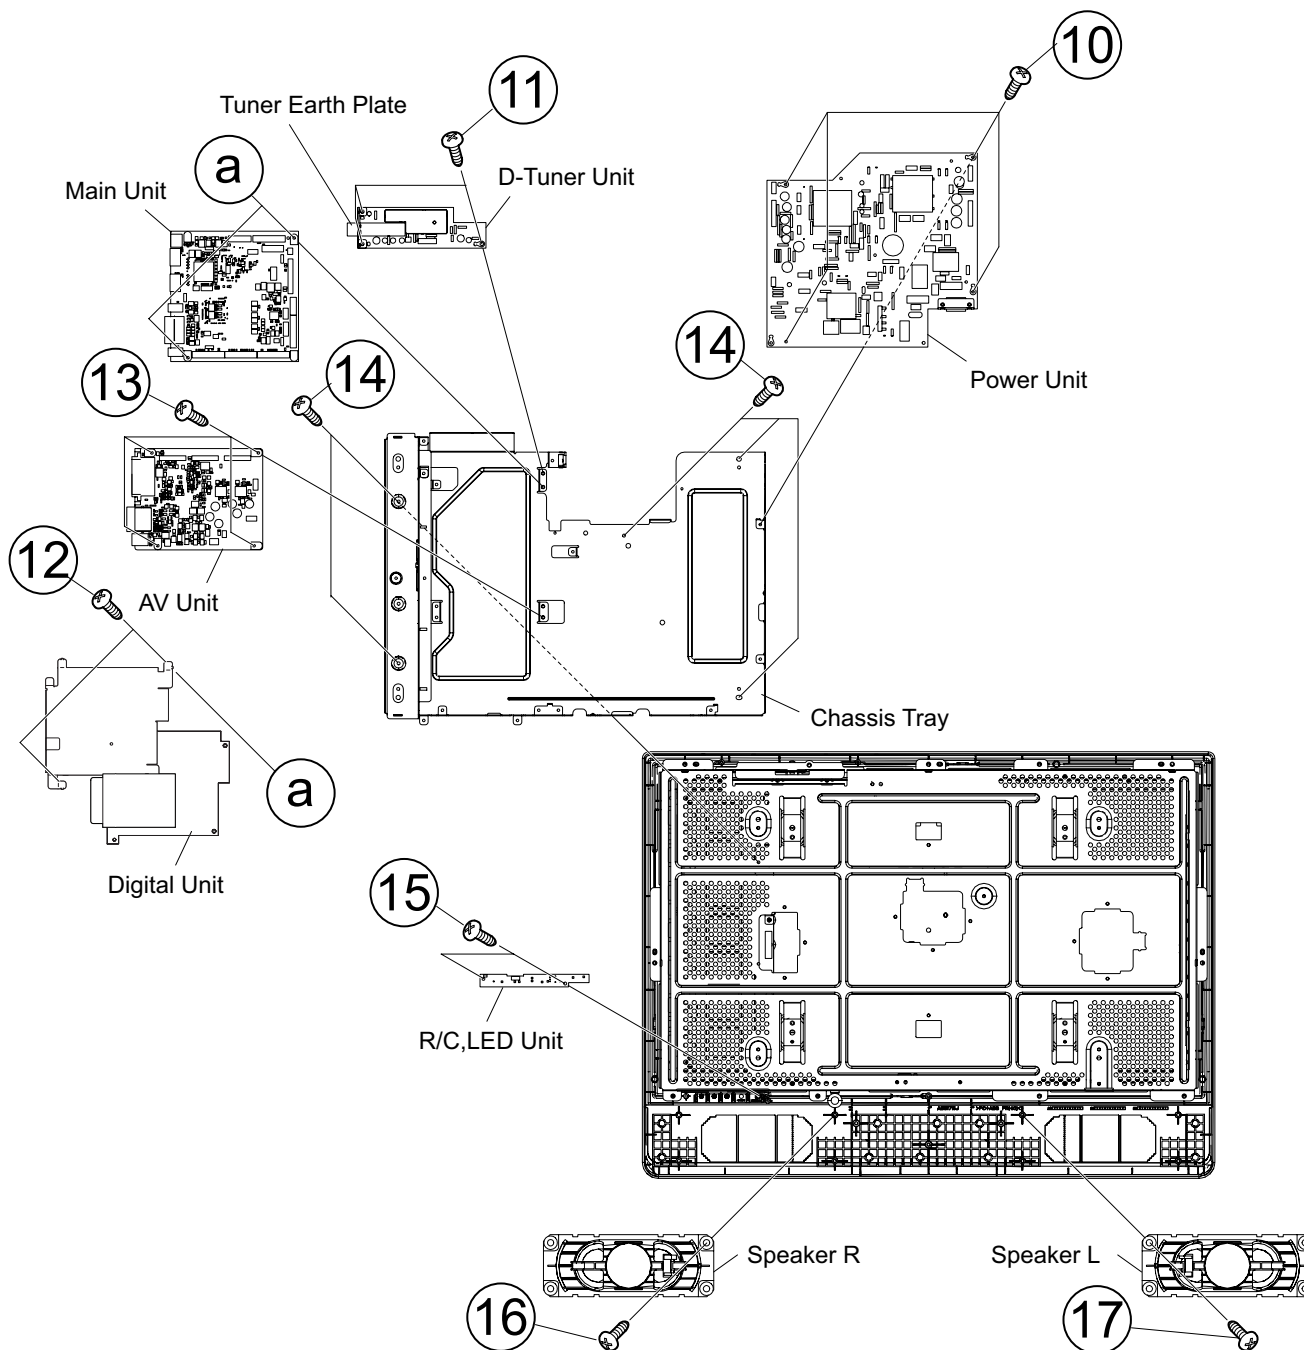


17. Remove the 8 lock screws (18) and the 6 lock screws (19), detach the LCD Angle.

18. Remove the LCD Panel Unit from Front Cabinet.

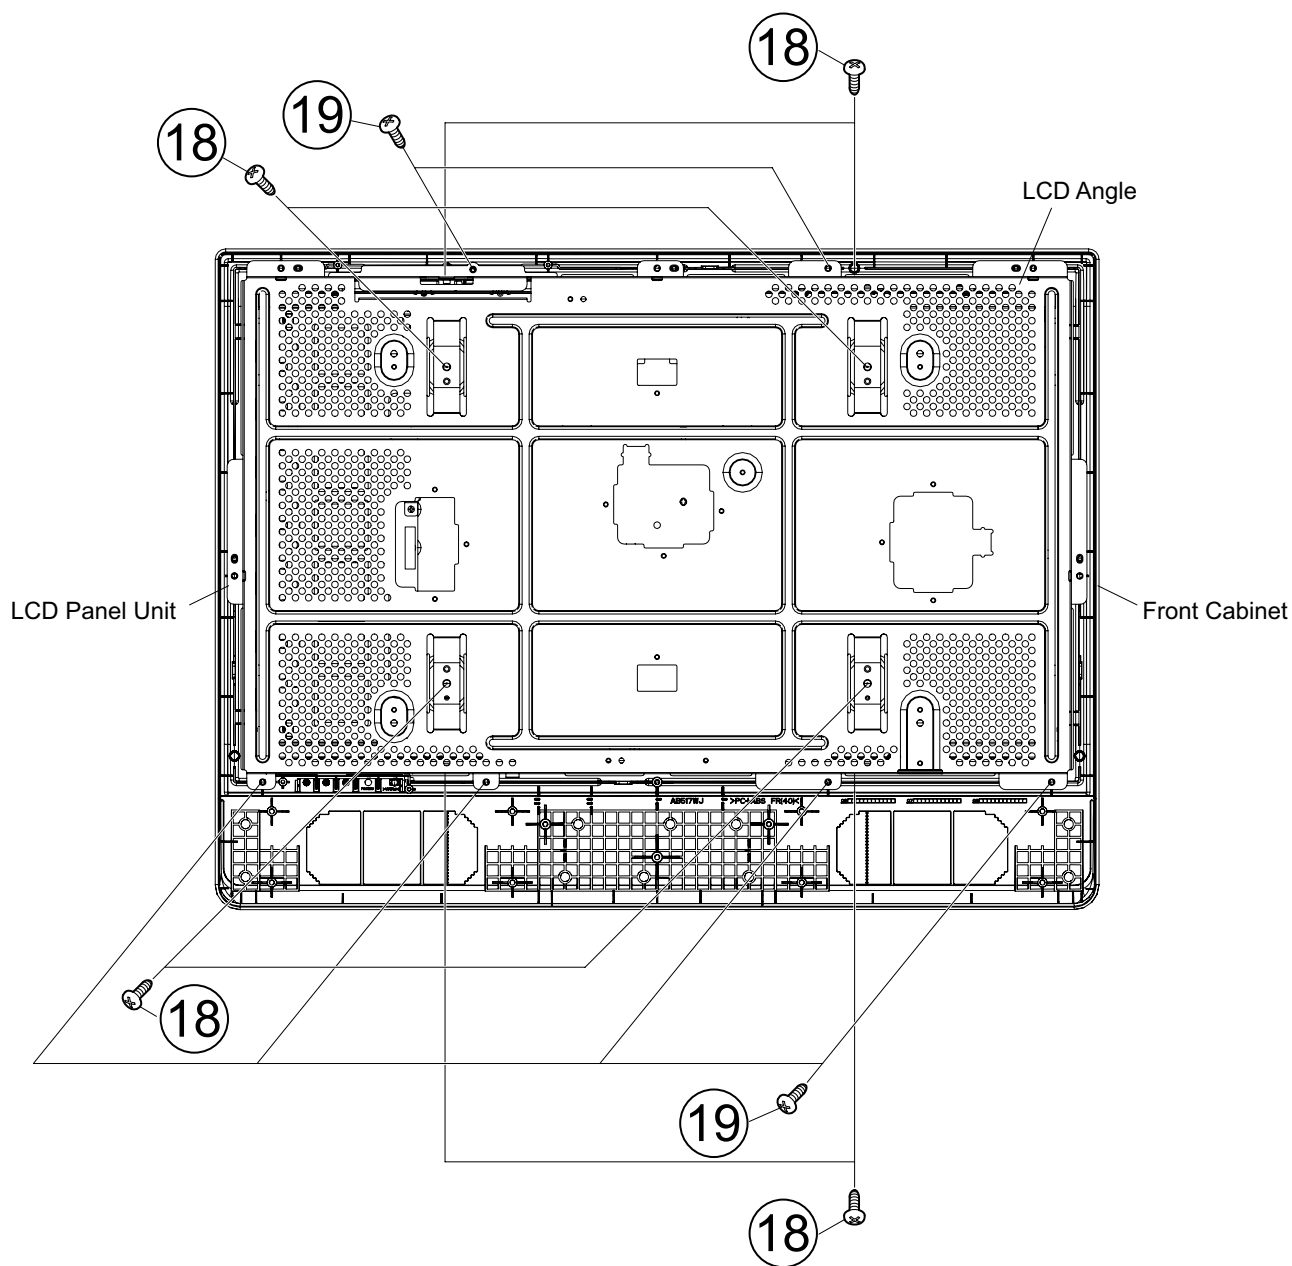


[2] REMOVING OF MAJOR PARTS LC-32SD1E/RU

1. Remove the 4 lock screws ① . Detach the Stand.
2. Remove the 6 lock screws ② . 1 lock screw ③ and the 9 lock screws ④ . Detach the Rear Cabinet.
3. Remove the 2 lock screws ⑤ and detach the Bottom Cover.
4. Remove the 4 lock screws ⑥ and detach the Stand Angle.
5. Remove the 6 lock screws ⑦ and detach the Center Angle L and the Center Angle R.
6. Disconnect the KM connector. Remove the 2 lock screws ⑧ and detach the Top Cover Ass'y.
7. Remove the 3 lock screws ⑨ and detach the KEY Unit.

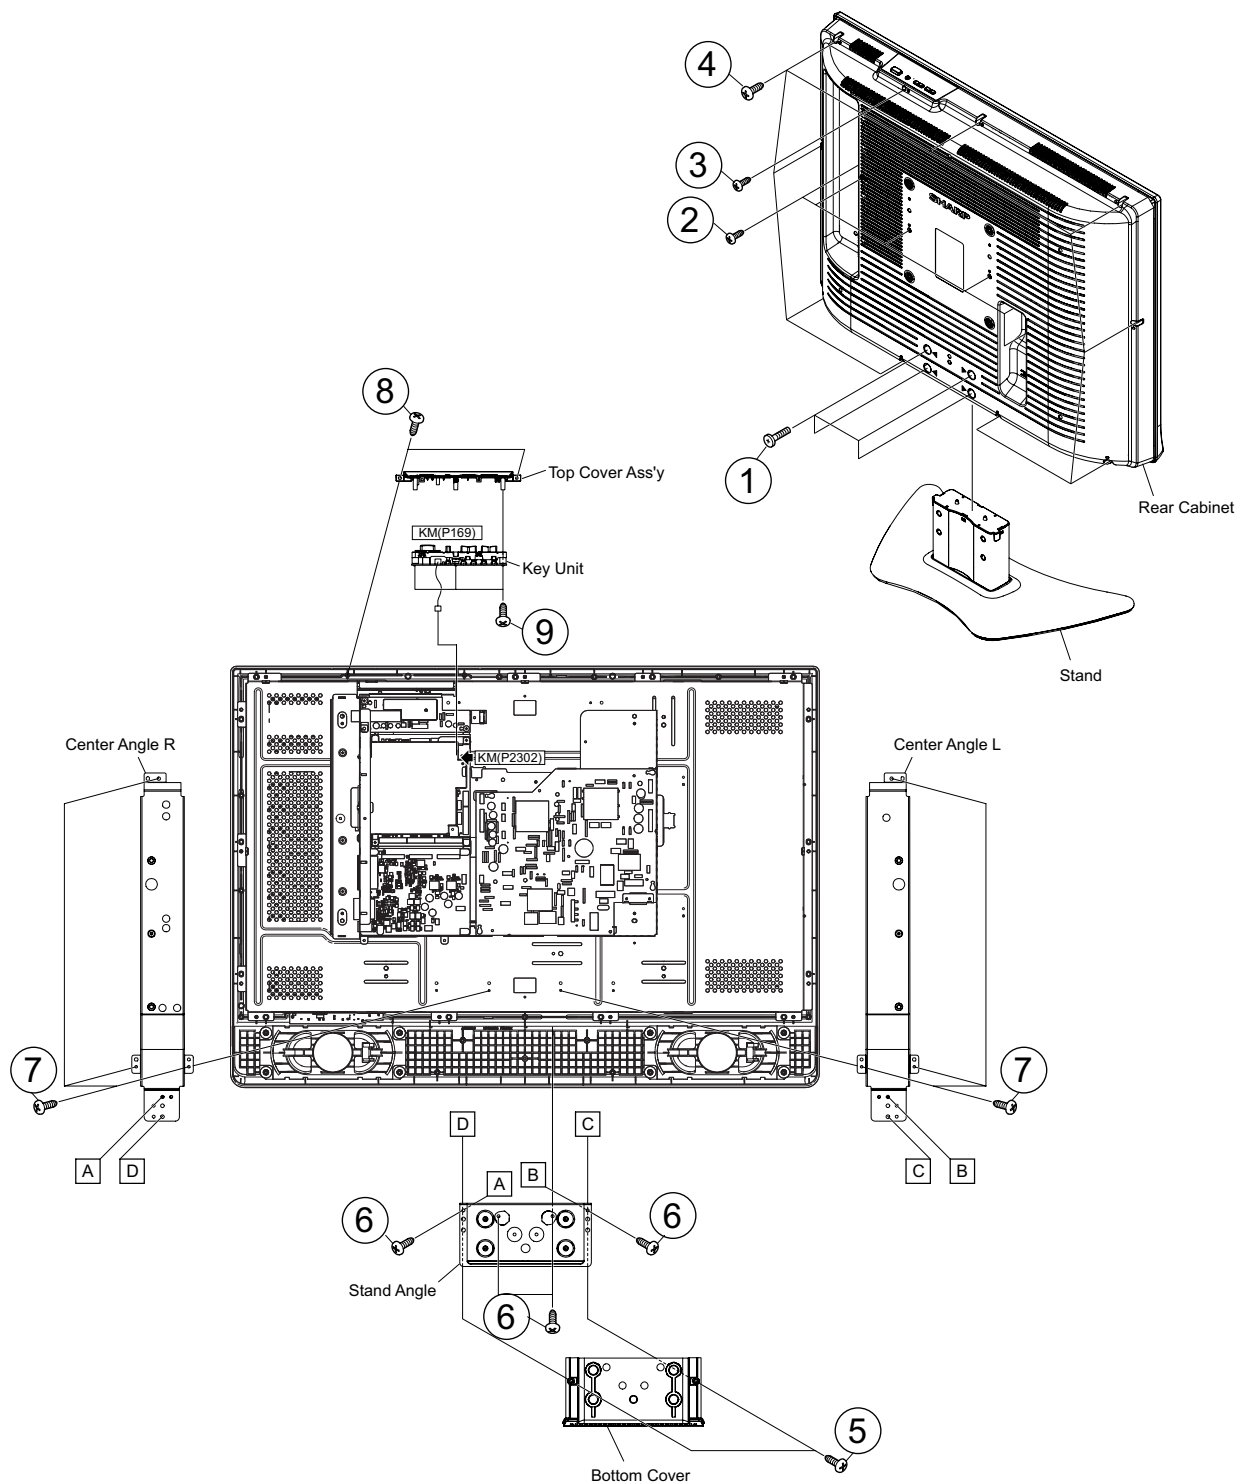


8. Remove all the connectors from PWBs.

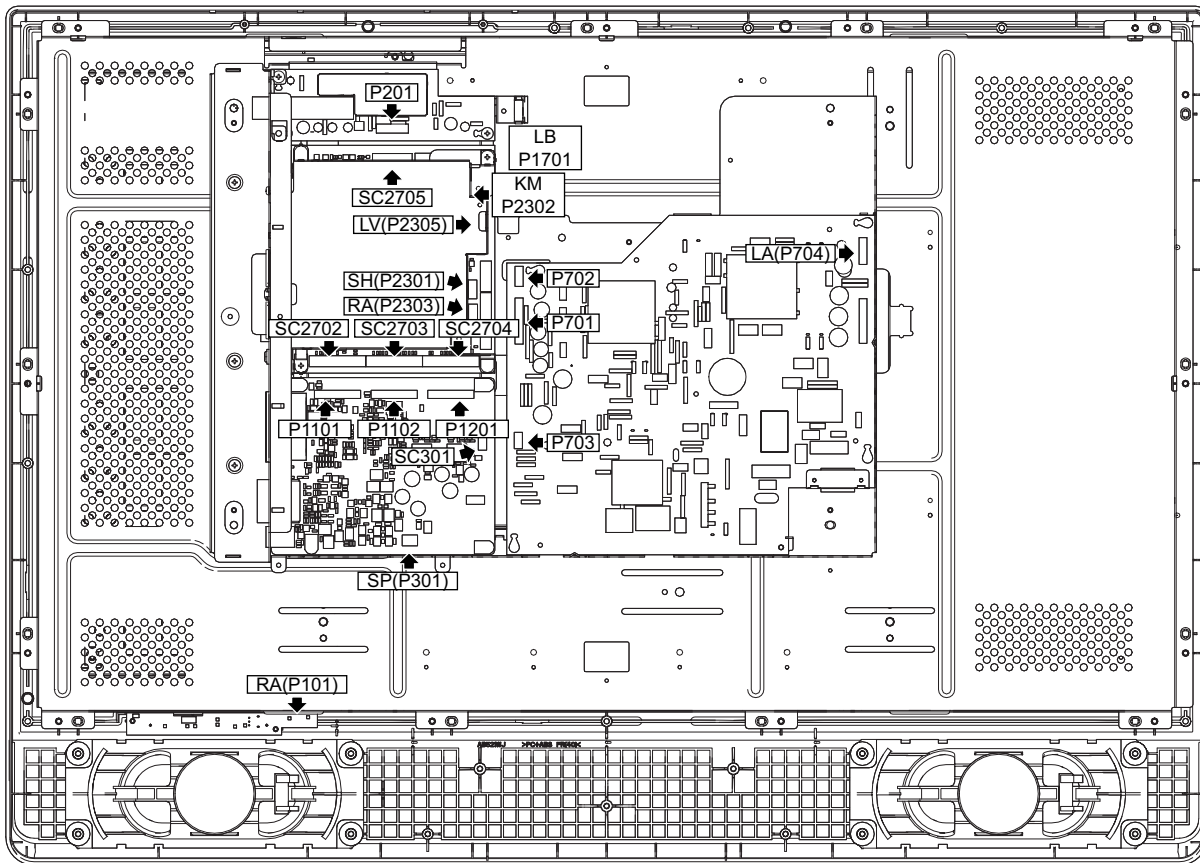

LC-26SD1E/RU, LC-32SD1E/RU

9. Remove the 4 lock screws (10) and detach the Power Unit.
10. Remove the 3 lock screws (11) and detach the D-Tuner Unit and Tuner Earth Plate.
11. Remove the 2 lock screws (12) and detach the Digital Unit and Main Unit.
12. Remove the 4 lock screws (13) and detach the AV Unit.
13. Remove the 5 lock screws (14) detach the Terminal Angle and the Chassis Tray.
14. Remove the 2 lock screws (15) and detach the R/C,LED Unit.
15. Remove the 1 lock screw (16) and detach the Speaker R.
16. Remove the 1 lock screw (17) and detach the Speaker L.

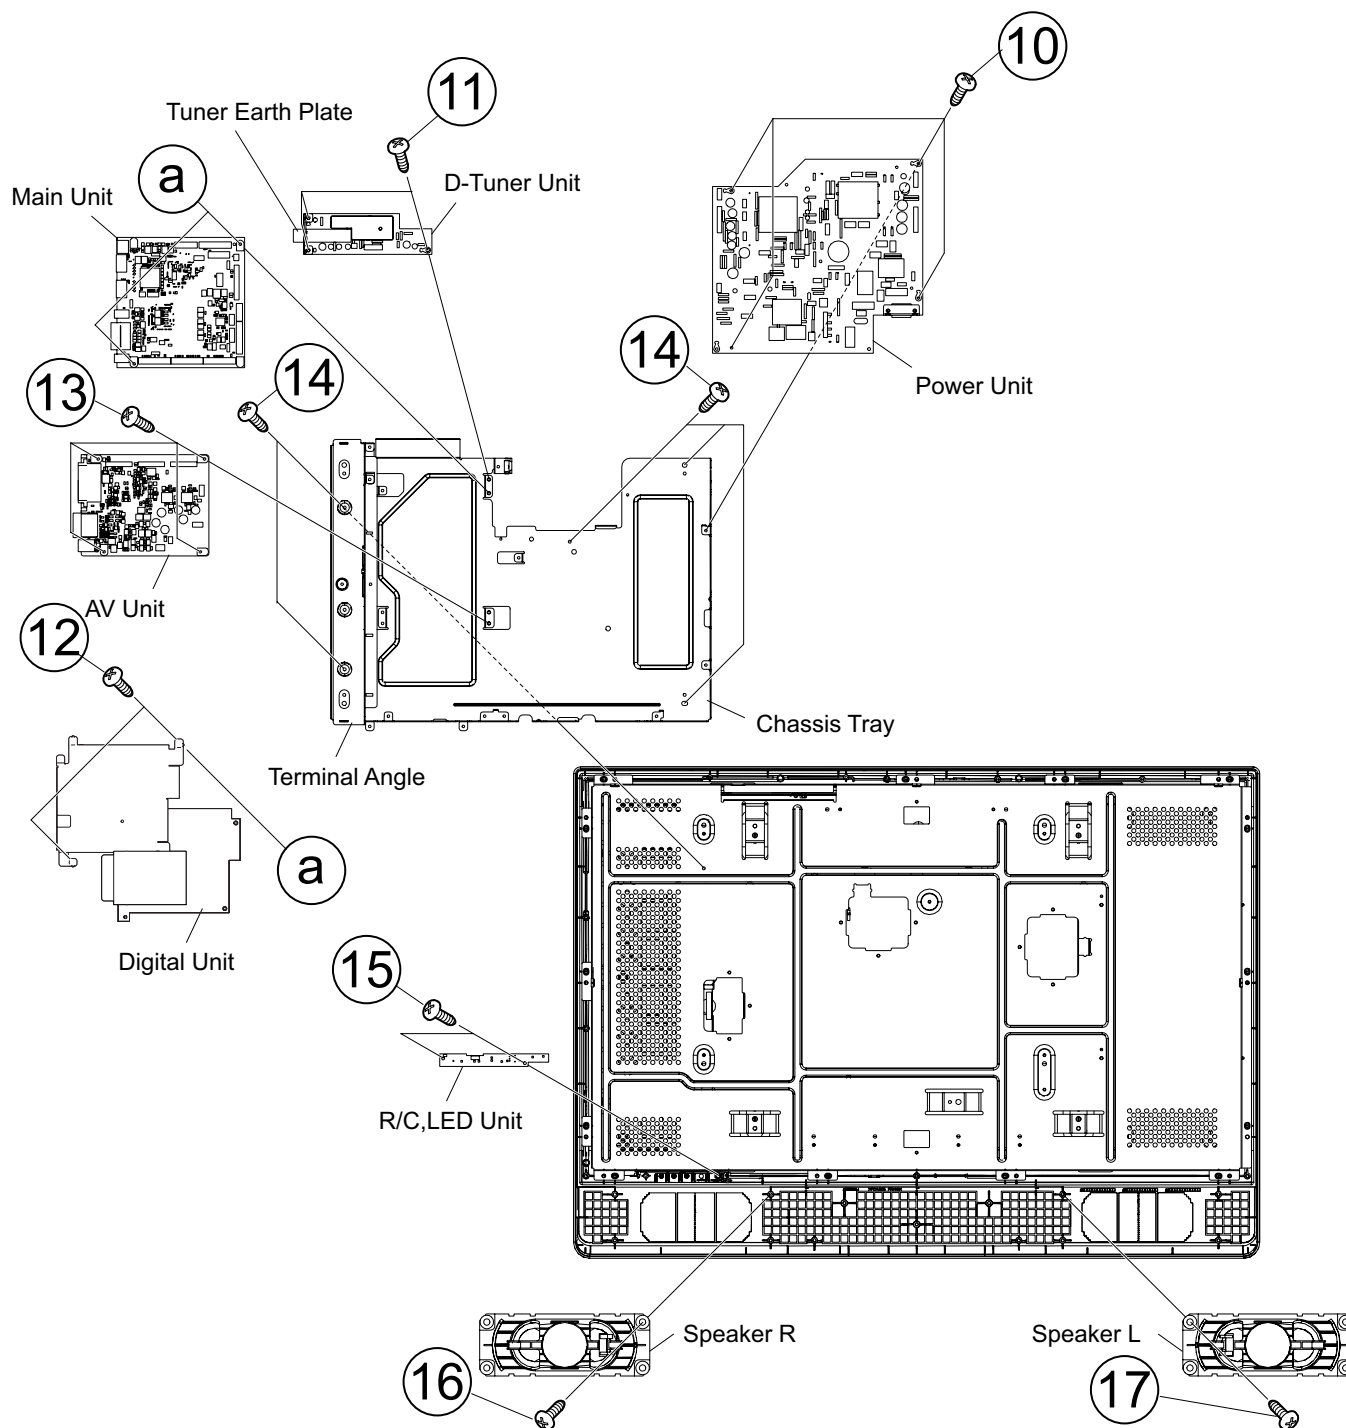

17. Remove the 8 lock screws (18) and the 5 lock screws (19), Detach the LCD Angle.

18. Remove the LCD Panel from Front Cabinet.

